



## LLY Alternate Cam Firing Order Wiring Instructions

Factory Firing Order: 1-2-7-8-4-5-6-3

Alternate Cam Firing Order: 1-5-6-3-4-2-7-8

*Injector Command Wires for Injectors 2, 5, 7, 6, 8, & 3 Need Switched at the Fuel Injector Control Module (FICM)*

### Connectors Before: (Stock)

#### Connector 1

<u>Pin #</u>	<u>Cylinder</u>	<u>Wire Color</u>
59	6	Dk. Blue / White
60	6	Dk. Blue / White
61	7	White / Red
62	7	White / Red

#### Connector 2

<u>Pin#</u>	<u>Cylinder</u>	<u>Wire Color</u>
115	3	White / Blue
116	5	Red / Lt. Green
120	8	White / Green
121	2	White / Yellow

### Connectors After: (Alternate Cam)


#### Connector 1

<u>Pin#</u>	<u>Cylinder</u>	<u>Wire Color</u>
59	7	White / Red
60	7	White / Red
61	6	Dk. Blue / White
62	6	Dk. Blue / White


#### Connector 2

<u>Pin#</u>	<u>Cylinder</u>	<u>Wire Color</u>
115	8	White / Green
116	2	White / Yellow
120	3	White / Blue
121	5	Red / Lt. Green

### Fuel Injection Control Module C1 Connector

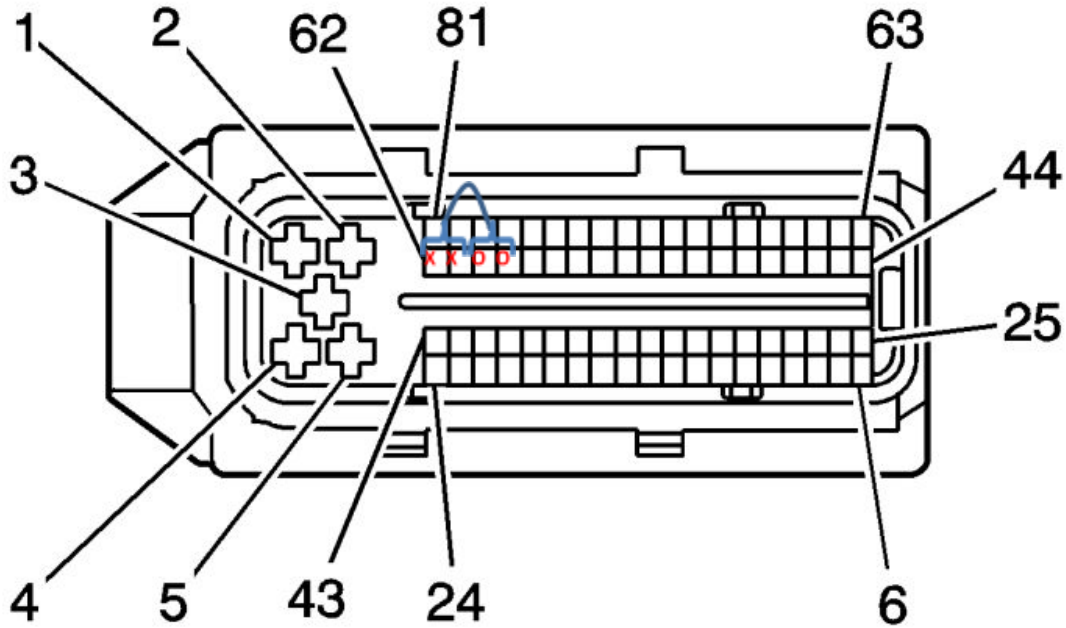

### Fuel Injection Control Module C2 Connector

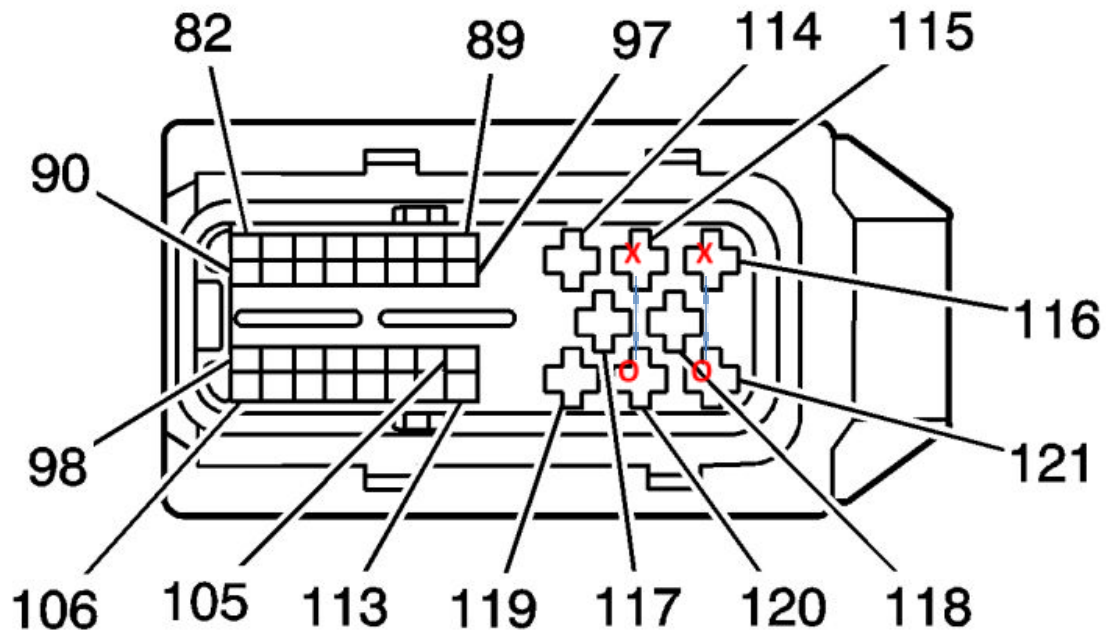

*Switch Wires with (X) cavities to (O) cavities*

9612 N 675 E  
 Odon, IN 47562  
 812-636-0391